

AURAL-M2

Get it ready for storage (simplified guide)



- 1. Thoroughly rinse AURAL external parts** with fresh water.
Immediately after a mooring, rinse the device to remove the salt water that could create corrosion on stainless steel components.
- 2. Look for any notable trace of corrosion.**
Contact Multi-Électronique in case of water infiltration or if the unit was damaged.
- **(Refer to page 19* for cylinder opening)**
- 3. Remove and discard the batteries.**
- 4. Remove the Hard Disk** and recover your files. (📖 page 24, 72*)
Handle the Hard Disk with care. To prevent static discharges, insert the Hard Disk and a desiccant bag into an antistatic bag. You can also install it in the external Hard Disk Case provided.
- 5. Insert a couple of desiccant bags** to prevent moisture. (📖 page 21*)
- **(Refer to page 21* for cylinder inspection and closing)**
- 6. Close the AURAL cylinder.** (You don't need to completely tight the screws)
- 7. Store the AURAL** in its original box.
It should be store in a safe place at tempered room temperature. Very cold or warm temperature could create strain on many parts that may result in damages.

* Please note that the reference page number is based on the AURAL-M2 User Guide V4.
(available to download on our website)

Multi-Électronique can store your AURAL for you.
The AURAL must be sent in its original shipping box.
Contact us for any details.